

# Acadia

# User Manual

VRH-ACADIA-30SS



**Vesta**

Simple Kitchen Solutions



# Table of Contents

---

|                     |    |
|---------------------|----|
| Warning             | 4  |
| Tools Needed        | 7  |
| Parts & Accessories | 8  |
| Product Dimension   | 9  |
| Installation        | 10 |
| Operations          | 24 |
| Maintenance         | 26 |
| Warranty            | 28 |
| Disclaimer          | 31 |
| Contact Us          | 32 |

---

# Warning

1. Installation work and electric wiring (including switch location) must be done by the qualified person(s) in accordance with local applicable codes and standards, including fire-rated construction.
2. This hood may have sharp edges. Be careful to avoid cuts and abrasions during installation and cleaning.
3. The hood must be placed at a minimum distance of 60cm from the cook panel.
4. Sufficient air is needed for proper combustion and exhausting of gases through the chimney of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association, and the American Society for Heating, Refrigeration and Air Conditioning Engineer (ASHRAE), and the local code authorities.
5. Ducted fans must always be vented to the outdoors.
6. This appliance is designed to be operated by adults. Children were not allowed to temper with the controls or play with this appliance.
7. **WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
8. When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.

**WARNING - TO REDUCE THE RISK OF FIRE, USE ONLY THE METAL DUCTWORK**

**WARNING – TO REDUCE THE RISK OF INJURY TO PERSONS IN THE EVENT OF A RANGE TOP FIRE, OBSERVE THE FOLLOWING**

1. **SMOTHER FLAMES** with a close-fitting lid, cookie sheet or metal tray, then turn off the burner, **BE CAREFUL TO PREVENT BURNS.** If the flames do not go out immediately, **EVACUATE AND CALL THE FIRE DEPARTMENT.**
2. **NEVER PICK UP A FLAMING PAN** – You may be burned.
3. **DO NOT USE WATER**, including wet dishcloths or towels – a violent steam explosive will result
4. Use an extinguisher **ONLY** if:
  - You know you have a Class ABC extinguisher, and you already know how to operate it;
  - The fire is small and contained in the area where it started;
  - The fire department is being called;
  - You can fight the fire with your back to an exit.

**WARNING – TO REDUCE THE RISK OF A RANGE TOP GREASE FIRE:**

 
 
1. Never leave surface units unattended at high settings. Boil overs cause smoking and greasy spillovers that may ignite. Heat oils slowly on low or medium settings.
2. Always turn hood **ON** when cooking at high heat or when flambéing food.
3. Clean ventilating fans frequently. Grease should not be allowed to accumulate on fan or filter.

4. Use proper pan size. Always use cookware appropriate for the size of the element.


**WARNING – TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSON, KEEP IN MIND THE FOLLOWING:**

1. Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer.
2. Before servicing or cleaning unit, switch power off at service panel and lock the service disconnecting means to prevent power from being switch on accidentally. When service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

# Tools Needed

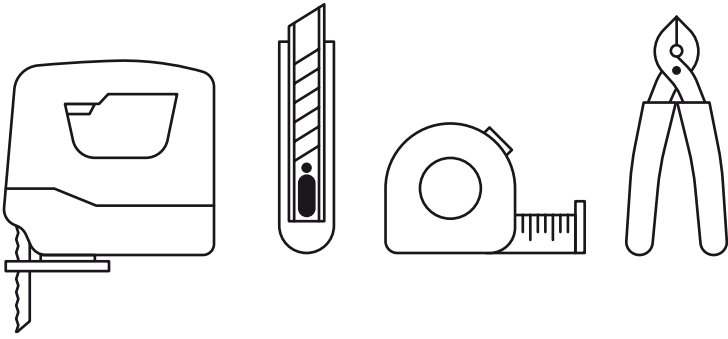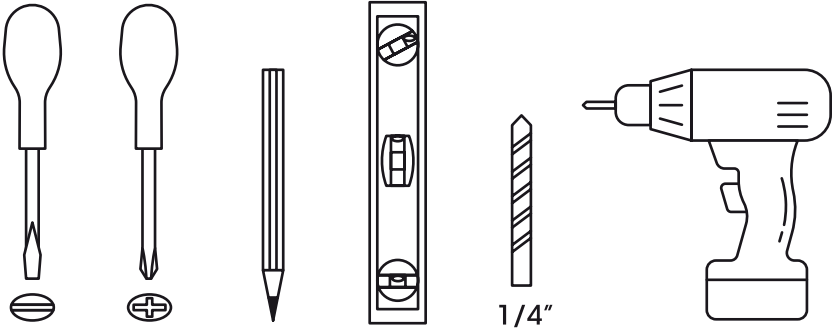

# Parts & Accessories

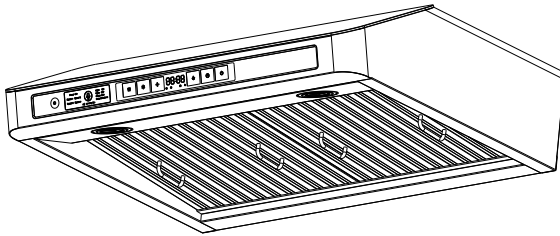 

Range Hood  
x1



 
Wire Connector  
x3




Screws  
x8



Rubber Ring  
x1

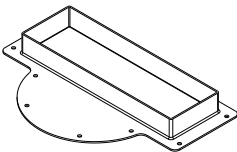


Top Vent Adapter  
(10" x 3 1/4")  
x1

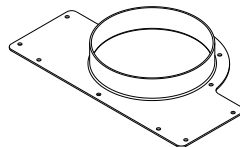 

Top Vent Adapter  
(6" Round)  
x1




# Product Dimension

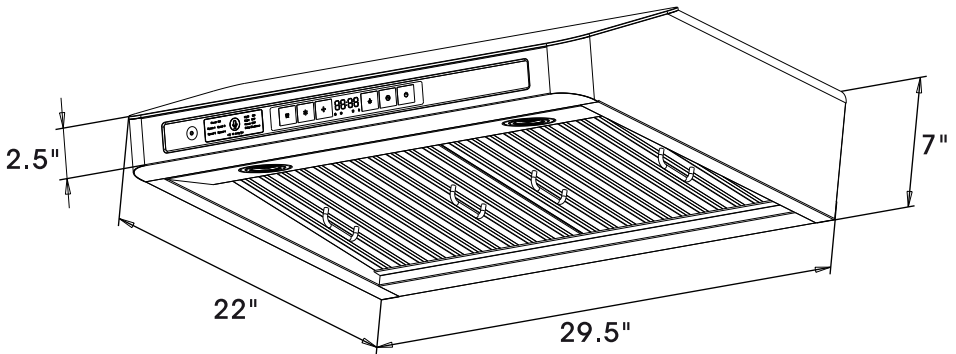 

# Installation


## (Grease Tunnel & Filters)
 
### BOTTOM VIEW


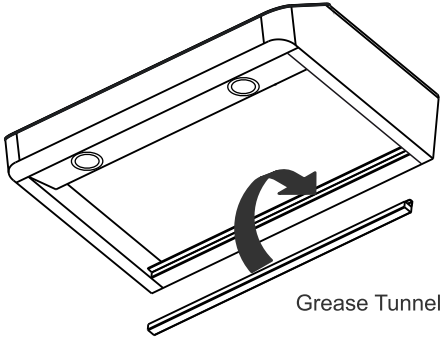


Place Grease Tunnel into the hood opening and insert into slot holding, as shown below.


### SIDE VIEW

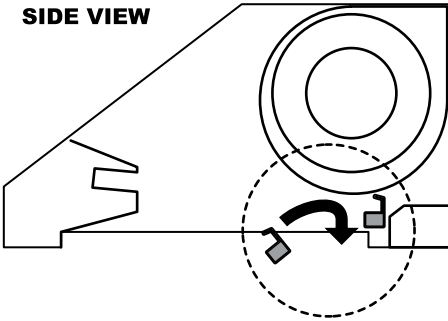 


### Baffle Filter

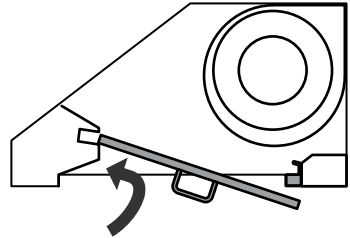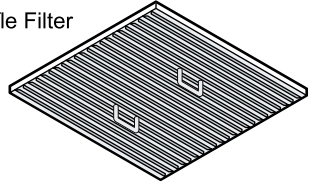  

 Angle filter toward front of hood opening above the front light and control panel.



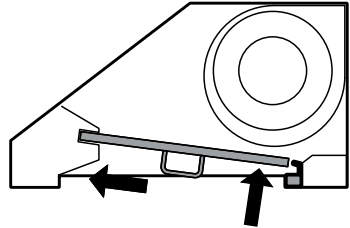


 Slide toward and into the recess behind the front of hood while raising the filter panel.

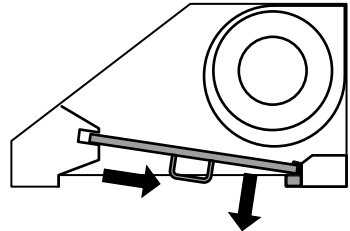

Lower filter while sliding back until it rests onto Grease Tunnel.


# Installation

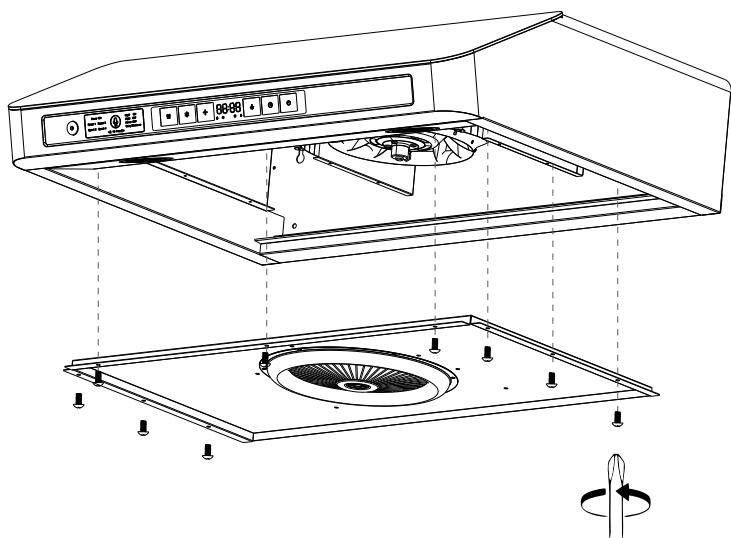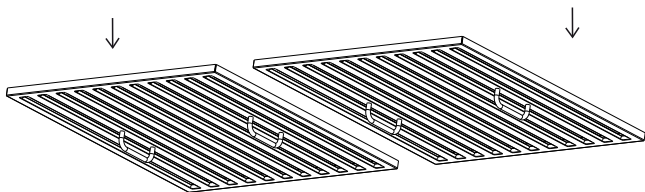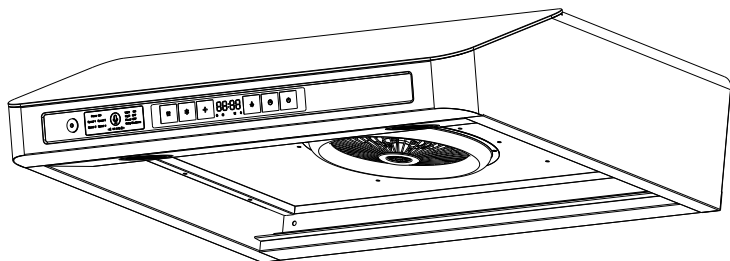   

Use the appropriate vent for your kitchen venting requirements.


**Top Rectangular Vent**

 Next Page

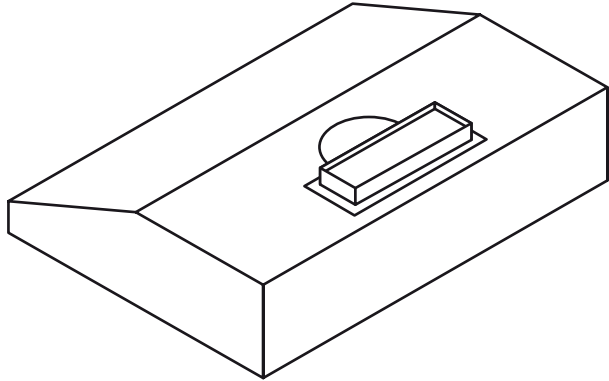


**Top Round Vent**

 
Skip to Page 16

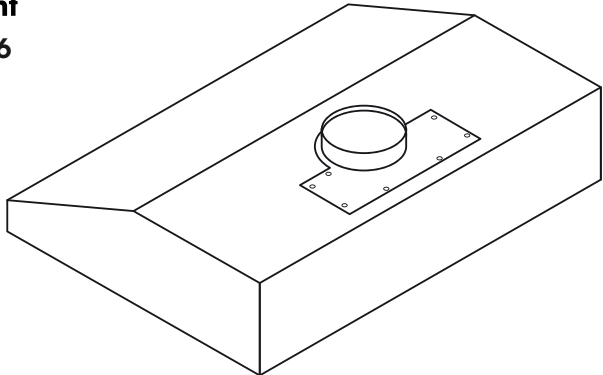


Snap on the rubber ring

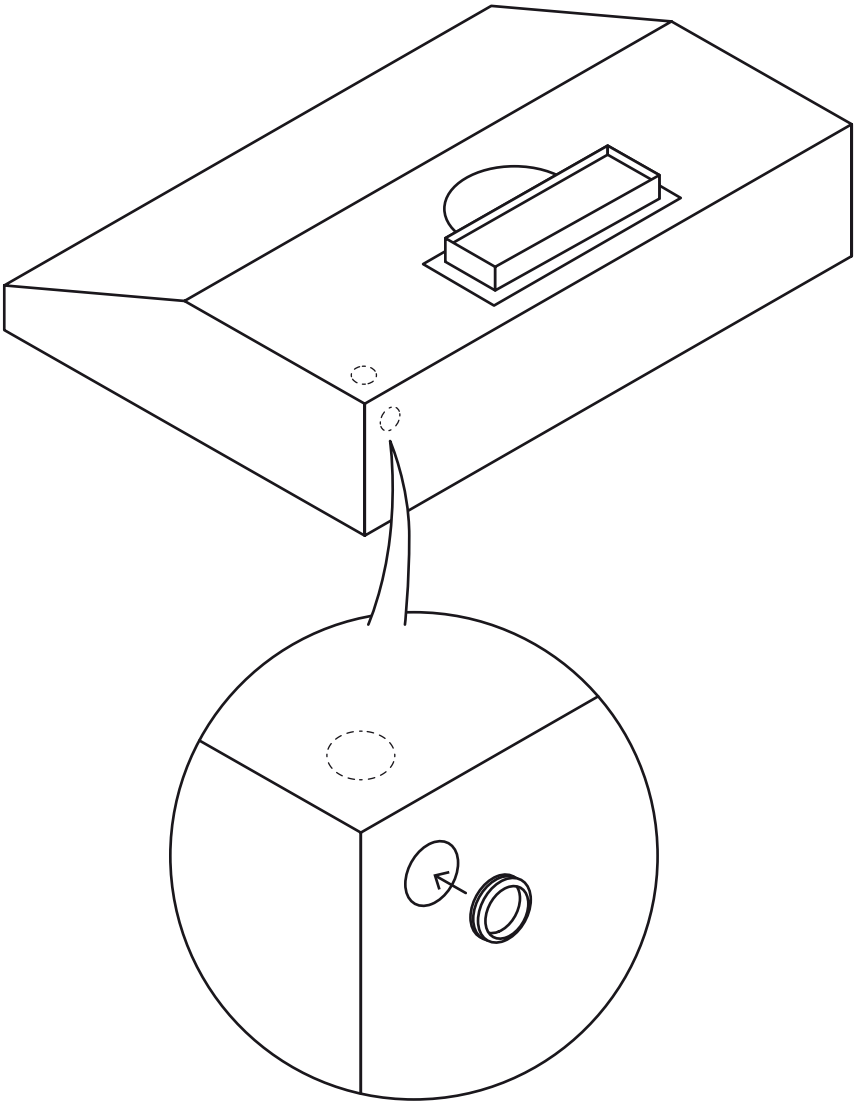 


Feed the wires through the hole

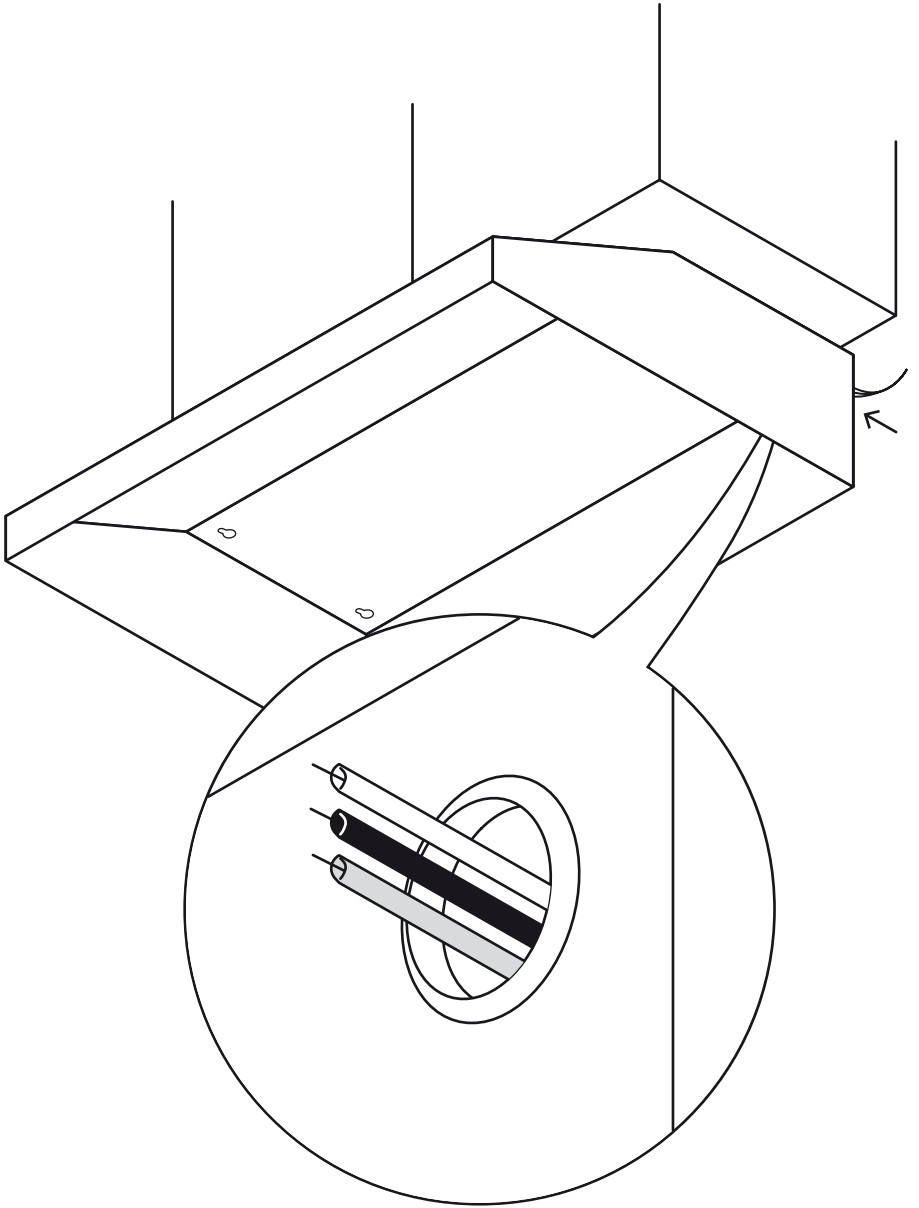 

 
1. Slide the range hood under the cabinet and slide the vent adapter into the vent
2. Secure with screws.

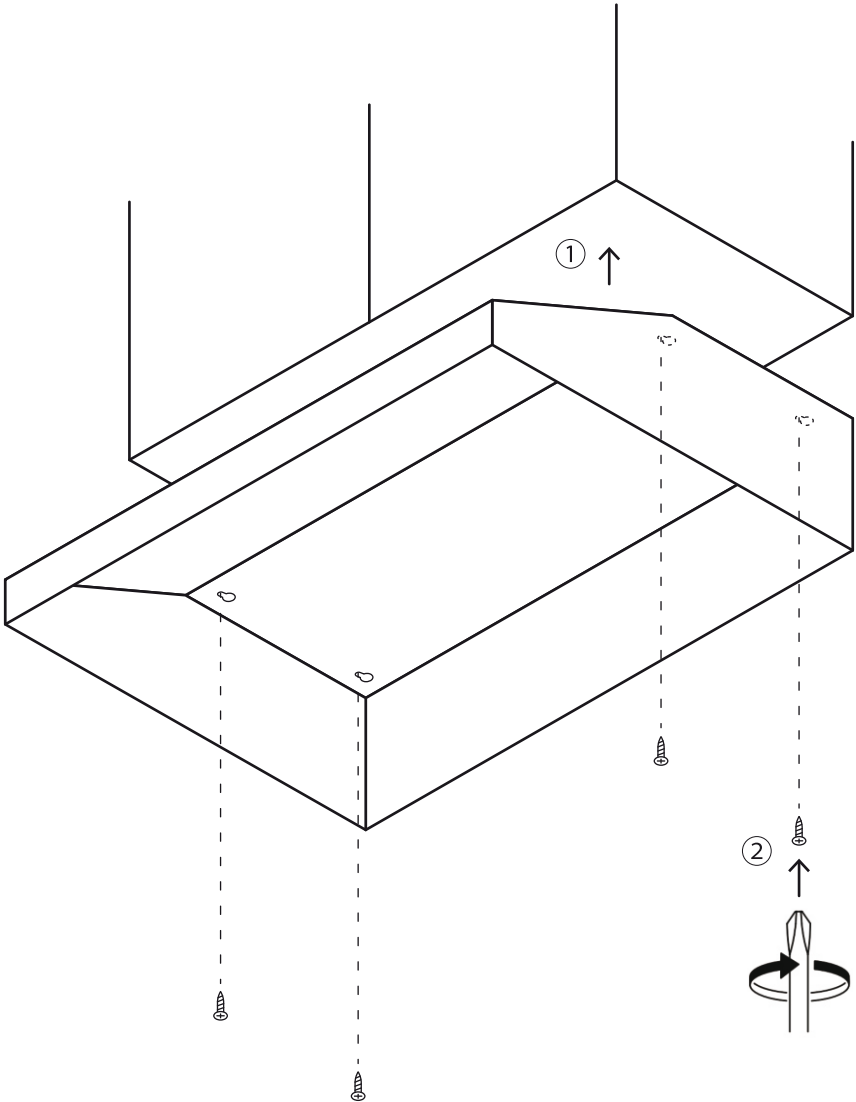


# Switching to Top Round Vent Adapter

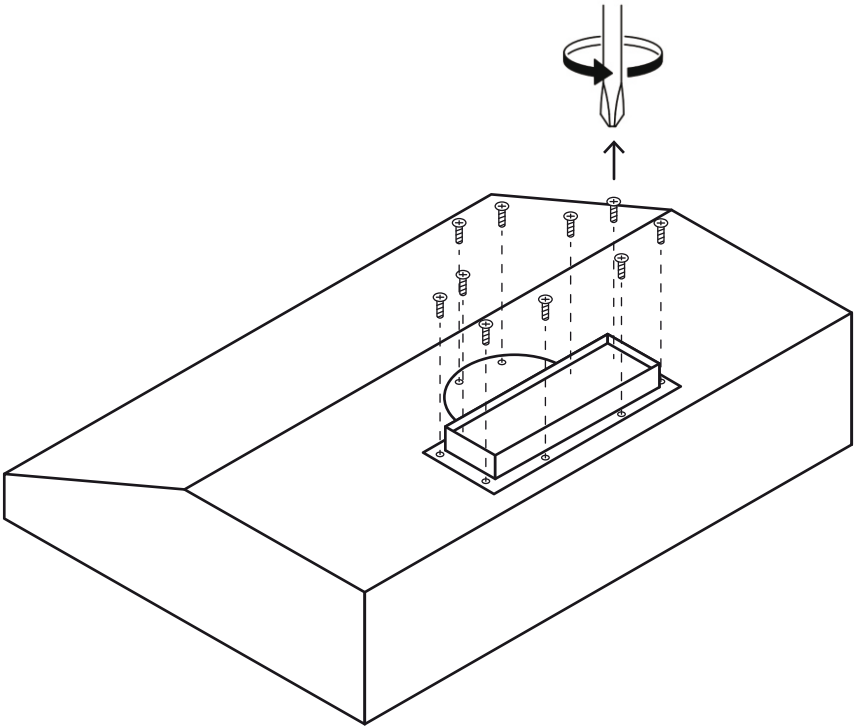 




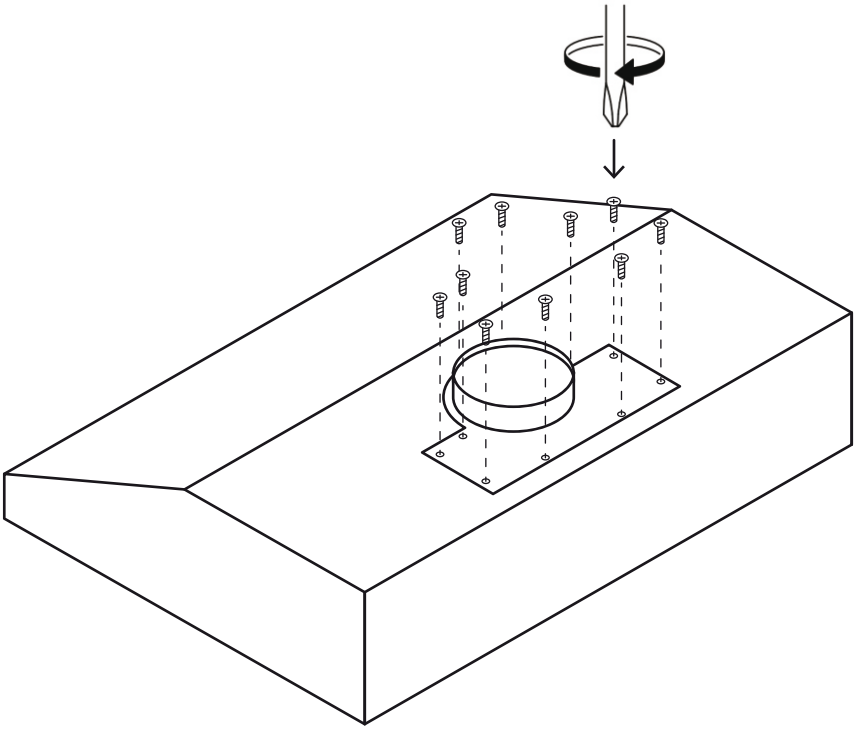 


Snap on the rubber ring

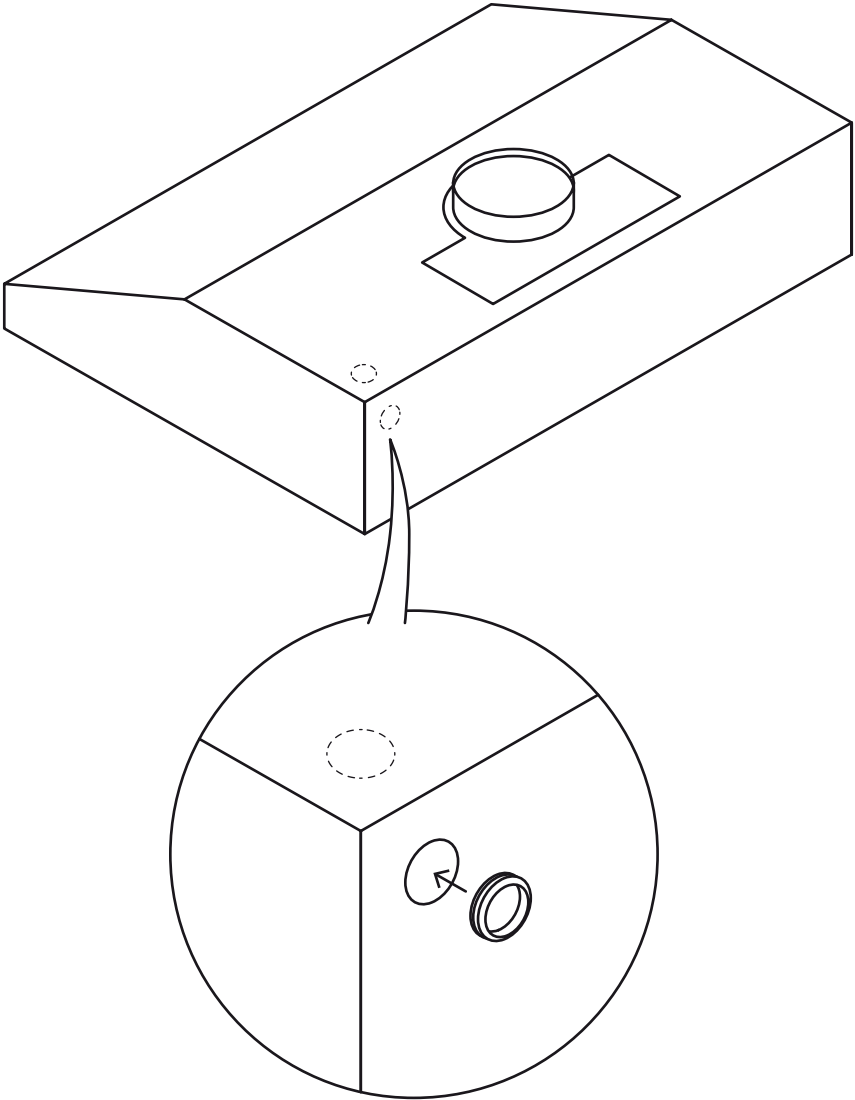 

Feed the wires through the hole

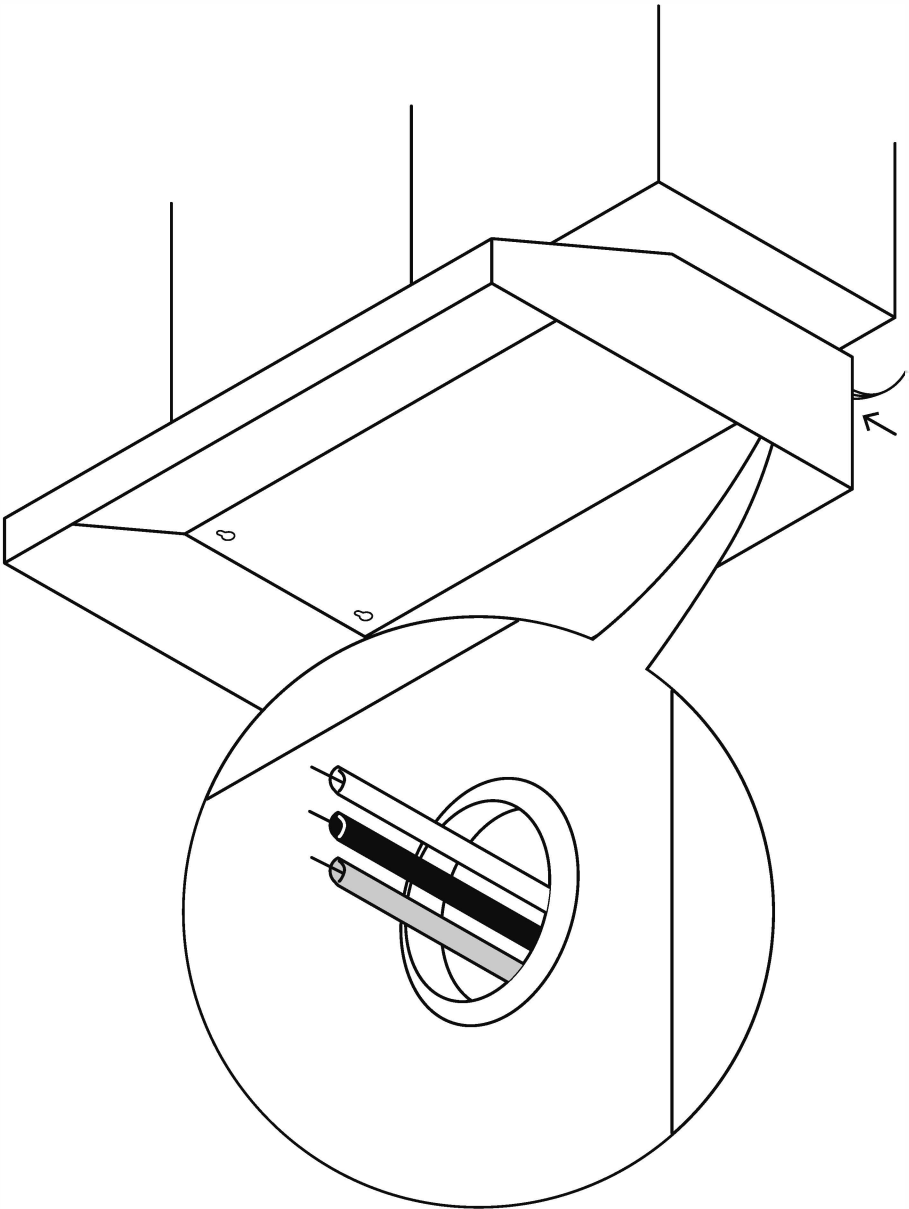 


 1. Slide the range hood under the cabinet and slide the vent adapter into the vent
2. Secure with screws.


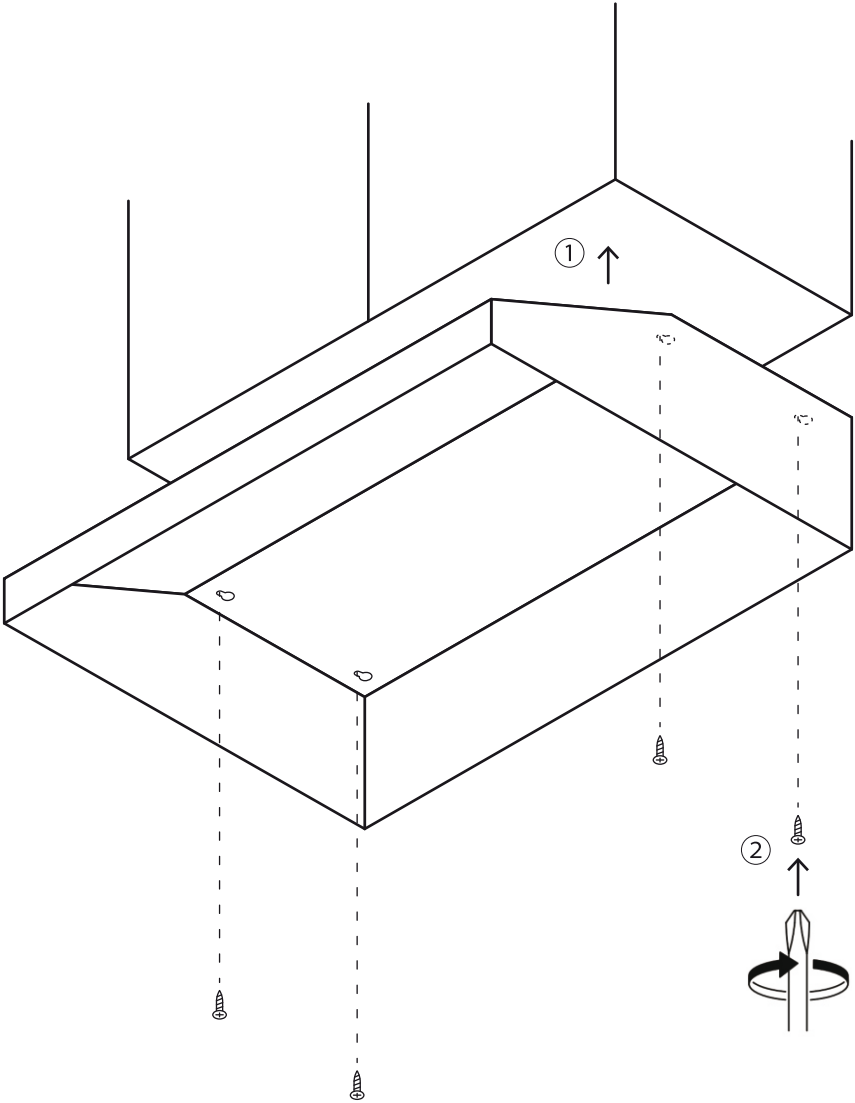




Connect the wires:

     - Black to Hot line
- White to Neutral line
- Green to Ground line
- Secure with "Twist-on Caps"

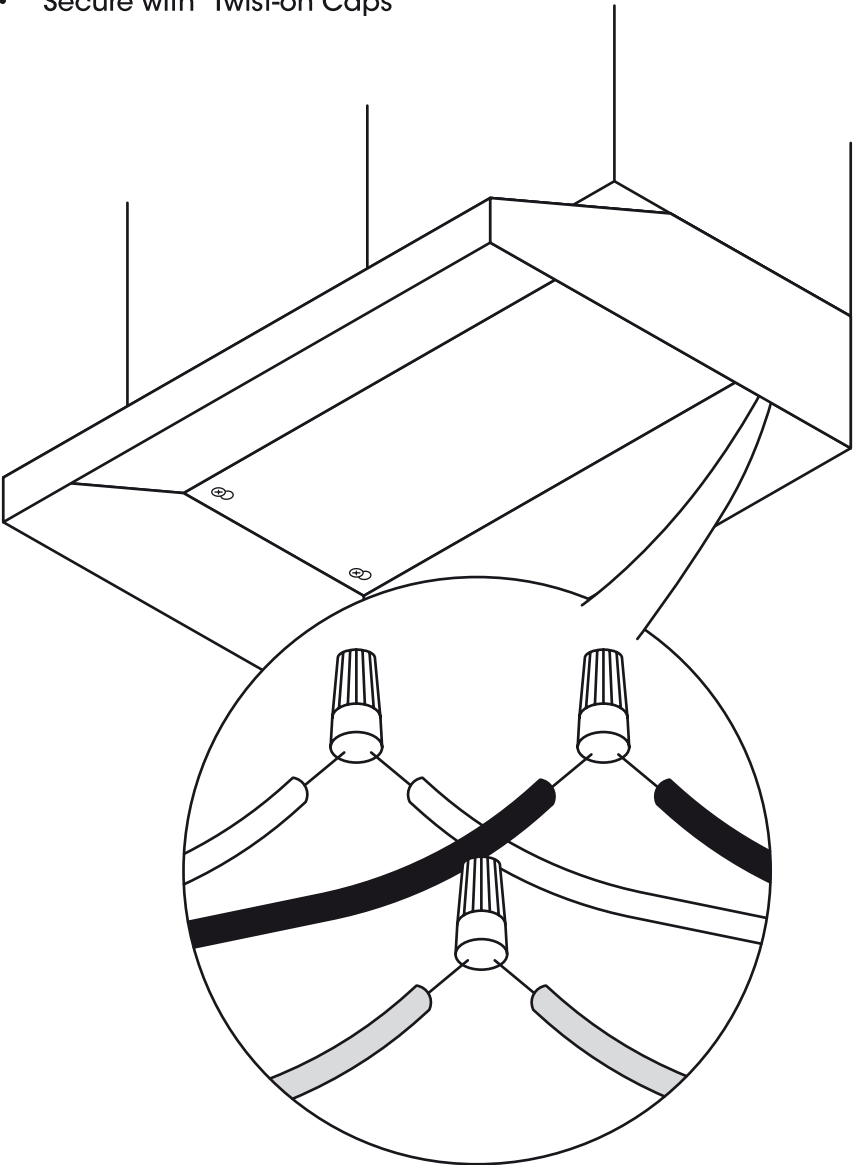



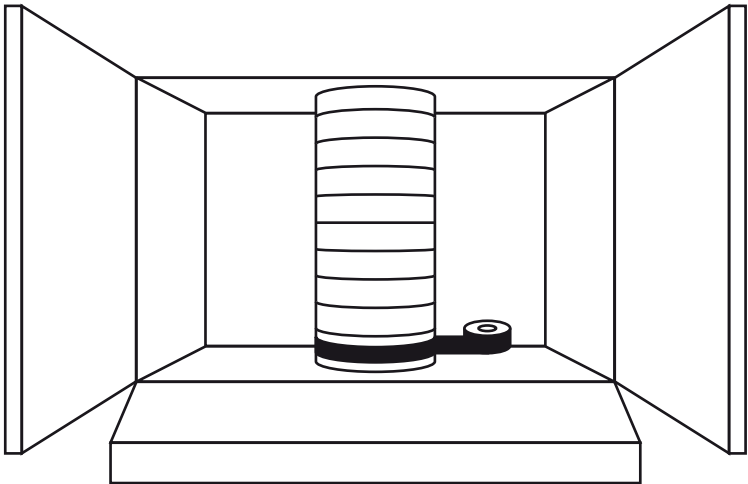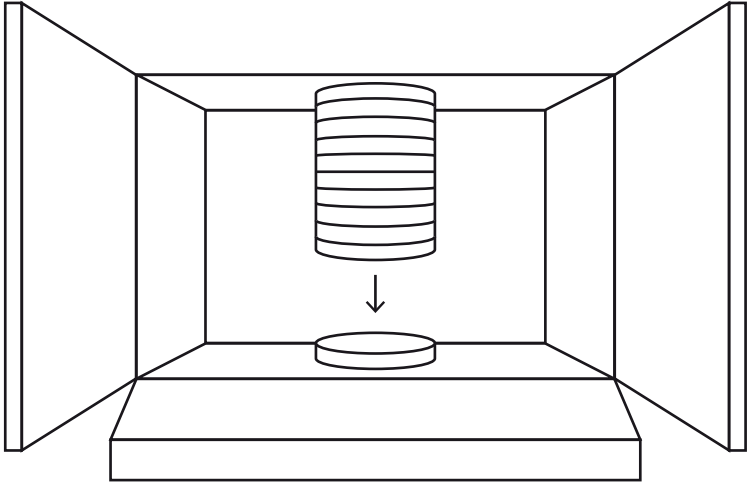

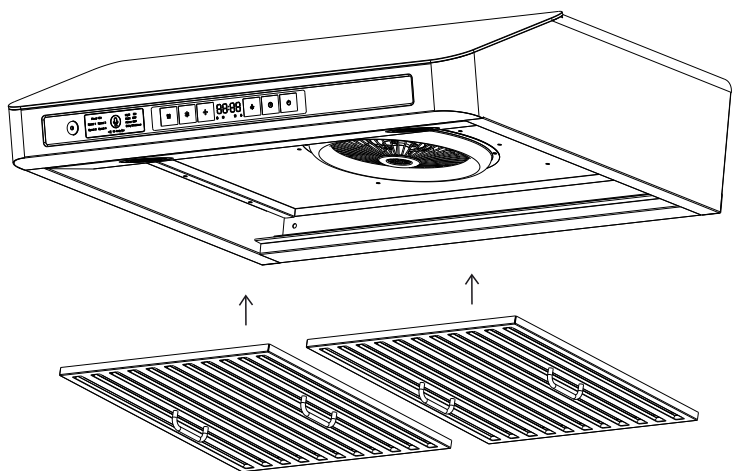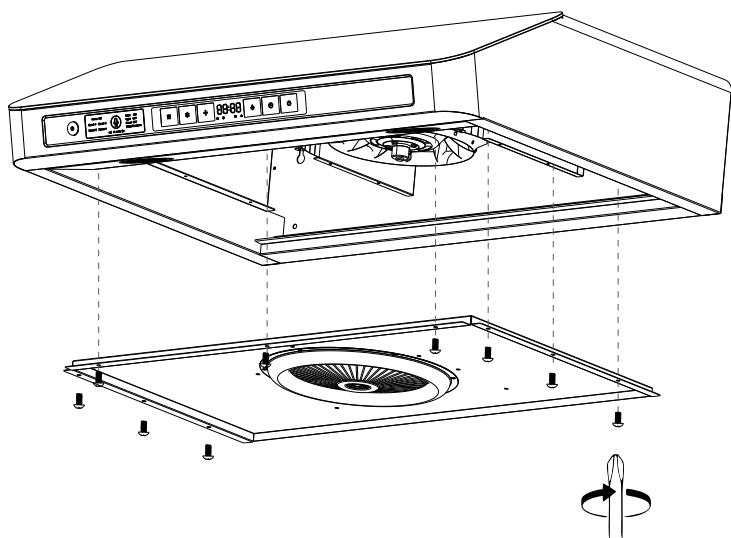
Connect round vent to vent adapter.  
Seal with aluminum foil tape.





# Operations








1.  Power: tap to turn on the range hood. (Hold for 3 seconds will turn on/off the gesture sensor. )
2.  Light: tap to turn on the light. (Hold the light button to change the brightness level.)
3.  Fan button: first touch will run the speed F1 (Hold for 3 seconds will turn on/off the voice control sensor. )
4.  Fan button: first touch will run the 1st speed F1, and then increase the settings until speed F16. Then touch again, return back speed F1.
5.  Timer: only works when the range hood fan is running, touch once, the timer has a default decrease or increase the time duration optionally.

## Gesture sensing control:

1. Wave hand from left to right once, the hood starts working at Speed 2 (F2).
2. Wave hand from left to right twice, the hood starts working at Speed 4 (F4).
3. Wave hand from left to right third, the hood starts working at Speed 6 (F6).
4. Wave hand from left to right, speed will increase until to Speed 16 (F16).
5. When wave your hand from right to left, speed starts to decrease.

## Set the clock:

1. Hold the clock button  for 5 seconds, the hours will blink  plus button to set the hour.
2. Tap the clock button  again to switch to the minutes  setting plus button to set the minutes.
3. Tap the power button  to finish setting the clock.

(Note: You will need to reset the clock if the power supply was cut off.)

## Memory function:

The smart control technology provides a memory function for speed and light level, the range hood will automatically operate at the same speed and light level the next time you turn it on, eliminating the need to adjust it manually.



### Finger swipe operation:

There are 16 speeds in total, which means it is divided into 5 sections. Each slide will advance into two gears, 3-6-9-12-16.



The starry sky background flashes dynamically according to the wind speed. The faster the windspeed, the higher the frequency.



### Voice-activated control:(Hi Vesta)

Talking to Vesta is a quick way to get things done, when you activate Vesta with your voice, Vesta respond out loud:



- |                      |                              |
|----------------------|------------------------------|
| • Hi Vesta           | Hi, I'm here                 |
| • Power on           | OK, working now              |
| • Speed one          | OK, speed one                |
| • Speed two          | OK, speed two                |
| • Speed three        | OK, speed three              |
| • .....              | .....                        |
| • Speed sixteen      | OK, speed sixteen            |
| • Turn on the light  | OK, the light is now on      |
| • Turn off the light | OK, the light is now off     |
| • Delay shutdown     | OK, shutdown 3 minutes later |
| • Power off          | OK, goodbye                  |

**Vesta will say "see you later" if no voice commands in 15 second s,but**

**Vesta will work for you again at any time when you say "Hi Vesta"!**

# Maintenance

## Exterior Body:

Clean grease with cloth. Apply a small amount of stainless steel solution and wipe with dry cloth.

## Filters:

The grease filters should be cleaned frequently (every two months of operation, or more frequently for heavy use). You can either clean the filters by hand with warm detergent solution and then rinse. Or you can use your dishwasher to do the cleaning. When you remove the filters, please do not bend them. After cleaning, please dry them before refitting.

## Oil Collector:

For the oil collector located inside the product, you can regularly check it to see if there are excess oil. If it does, you can clean the collector with warm detergent, rinse it, and let it dry before refitting.

# Specifications

|                         |  |
|-------------------------|--|
| Body                    | Stainless Steel  |
| Power Rating            | 120V/60Hz (USA & Canada standard)                            |
| General Input Power     | 80W + # of Light x Voltage of Light                          |
| Motor Input Power       | 80 W each  |
| Ampere                  | 3.0 A  |
| Levels Of Speed Control | 16   |
| Maximum Airflow         | 900 CFM  |
| Noise Level (dB / sone) | Approximately 35 / 0.7 to 60 / 6.5 (Lowest to highest Speed) |
| Motor Type              | Single Chamber Ultra Quiet                                   |
| # of Motors             | 1  |
| Fan Type                | Centrifugal Squirrel Cage                                    |
| Control Type            | Voice/Gesture/Touch  |
| Filtration Type         | Baffle Filter  |
| Illumination            | LED 3W 12V   |
| Venting Size            | Top, 6 inches Round  |
| Interference Protection | Radio Frequency Interference Protected                       |

\* Subject to change without notice, please contact your local reseller for details.

# Warranty

## **TO OBTAIN SERVICE UNDER WARRANTY:**

You must present proof of original purchase date.

Please provide an original dated proof of purchase (sales receipt / invoice) in order to obtain service under warranty.

## **Lifetime Motor Warranty**

The motor, which is covered by lifetime warranty, should be provided free of charge by your local reseller given it failed due to manufacturing defects. Subject to the conditions and limitations set forth below, your local reseller should, at its option, either repair or replace it with new or refurbished motor to be functionally equivalent to new. The consumer is responsible for all shipping costs.

## **One Year Parts Warranty**

For one year from the date of original purchase, your local reseller will provide free of charge, non-consumable replacement parts or components that failed due to manufacturing defects. Subject to the conditions and limitations set forth below, your local reseller will, at its option, either repair or replace any part of its products that prove defective by reason of improper workmanship or materials. Repaired parts or replacement products will be provided by your local reseller on an exchange basis, and will be either new or refurbished to be functionally equivalent to new. The consumer is responsible for all shipping costs. Consumable parts not covered by this warranty include but not limited to: Light bulbs, metal, aluminum and charcoal filters.

## **Who is Covered**

This warranty is extended to the original purchaser for products purchased for ordinary home use.

## **This Warranty Will Be Voided When:**

Product damaged through negligence, improper installation, accident, abuse, misuse, natural disaster, insufficient or excessive electrical supply, abnormal mechanical or environmental conditions, or any unauthorized disassembly, repair, modification, or failure to follow installation instructions. When product is used commercially or other than its intended purpose. Damaged because of improper connection with equipment of other manufacturers. Repaired or modified by anyone other than your local reseller's authorized agents. This limited warranty also does not apply to any product on which the original identification information has been altered, obliterated or removed, has not been handled or packaged correctly or has been sold as second-hand.

## **What is Not Covered:**

Consumable parts such as light bulbs, metal and charcoal filters. The natural wear of finish, and wear due to improper maintenance, use of corrosive and abrasive cleaning products, pads, and oven cleaner products. Chips, dents or cracks due to abuse, misuse, freight damage, or improper installation. Damage of product caused by accident, fire, floods or act of God. The manufacturer and/or distributor/reseller is not liable for, and does not cover under warranty, any loss of properties or any costs associated with removing, servicing, installing, or determining the source of problems with this product.

This warranty is valid in the country of the original purchase at retail. It is non-transferable and applies only to the original

purchaser and does not extend to subsequent owners of this product. Any applicable implied warranties, including the warranty of merchantability, are limited in duration to a period of express warranty as provided herein beginning with the date of original purchase at retail and, no warranties, whether express or implied, shall apply to this product thereafter.

To obtain warranty service, you may contact your local reseller from which you purchased this product. Please confirm the terms of your local reseller's policies prior to contacting. Typically, you must include product identification information, including model number and serial number with a detailed description of the problem you are experiencing. You must also include proof of the date of original retail purchase as evidence that the product is within the applicable warranty period.

# Disclaimer

Carefully inspect all items for damages before accepting delivery. Note any damages on the freight bill or express receipt. Request name and signature of the carrier's agent and keep copy to support your claim. Upon acceptance of items, owner assumes responsibility for its safe arrival. Report damages to the carrier and file a claim immediately. Failure to do so may result in the denial of your claim. The carrier will furnish you with necessary forms for filing a claim.

Damages caused during transit are not covered under our warranty. Please contact us to file an insurance claim.

Please inspect contents of package(s) carefully upon receiving! We must be notified of any damages and/or missing parts within five (5) days upon your receipt of package(s). Claims will not be accepted after five (5) days. NOTE: Items were thoroughly tested and carefully packed in our factory before shipping.

Products must be returned in good working condition with ALL original parts and documentation packed in ALL original cartons, fillers and shipping cartons. A restocking fee of 15% will be charged for all approved return(s). Exchanges or returns may not be accepted if any packaging is missing.

Make sure to inspect the hood for damages and defects before installation. Appearance flaws of the hood found after installation and not affecting hood performance is not covered under our warranty for returns or exchanges. Service visits not covered under warranty will carry a service charge.

Before Installation: Return for exchange or refund (please see above for acceptable returns). After Installation: NO exchange or refund.

# Contact Us

Dear Valued Customer,

Thank you for choosing Vesta as your preferred provider for kitchen appliances. We are committed to providing you with exceptional customer service and support.

If you require assistance with any of our products, please do not hesitate to contact us. You can reach our customer service team by choosing one of the methods below and one of our representatives will respond to you promptly.

Thank you for your business, and we look forward to serving you soon.

Phone:

**905-886-5858**

9:30am-5:00pm (Eastern Time), Monday to Friday, except holidays

Email:

**service@vesta.kitchen**

Online form:

**<https://www.vesta.kitchen/service>**

Sincerely,

The Vesta Service Team



# **Vesta**

**Simple Kitchen Solutions**

[www.vesta.kitchen](http://www.vesta.kitchen)